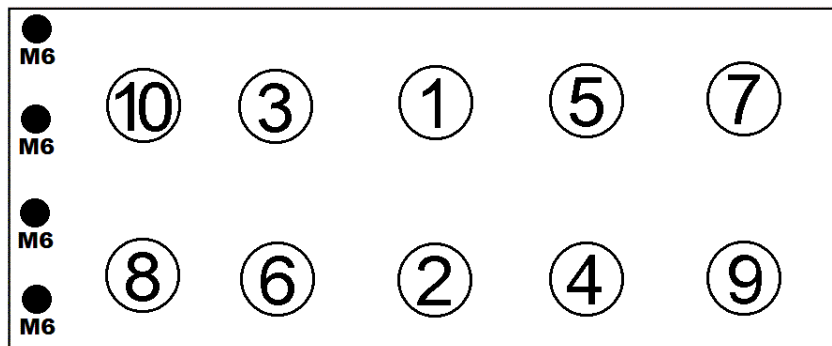


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****685.662**passend für / suitable for
adaptable à / adaptable a**VW / AUDI / SEAT / SKODA****Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

325.930

M 10x1,5x117

Anziehen/
Tightening/
Serrage/
AprieteM10
40 Nm
> 90°
> 90°M6
4 Nm
90°**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
>	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 83,3 mm ÷ 0,9 mm

88-155 KW (120-211 PS)

Mot. BZB, BYT, BZB, CGYA, CAWA, CAWB, CCTA, CDAA, CDNC

CDNB, CAEB, CAEA, CBFA, CCZA, CCZB, CCTB, CABB, CABA

CDHA, CDHB, CABD, CFPA, CFKA, CDAB, CDMD, CESA, CETA

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

685.662