



## Filter, Innenraumluft

### Hinweis:

Der Innenraumluftfilter befindet sich im Wageninneren, in Fahrtrichtung rechts hinter dem Handschuhfach.

### Ausbau:

Die Armaturenbrettdeckung unterhalb des Handschuhfaches entfernen.

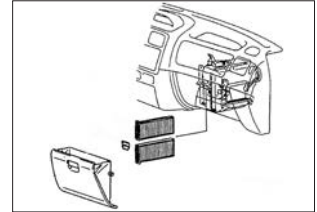


Abb.1

Das Handschuhfach, die seitlichen Verkleidungen sowie den Rahmen ausbauen.

Transistor und Luftreiniger ausbauen.

### Vorsicht Hochspannung!

### Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

### Auf richtigen Sitz des Filterelements achten!

### Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!





## Filter, Cabin Air

### Note:

The cabin air filter is installed inside the car at the right side behind the glove box.

### Filter Replacement:

Remove the cover of the dashboard under the glove box.

Detach the glove box, the side covering and the fitting frame.

Remove the cover of the cabin air filter case and take out the filter.

### Attention! High voltage!

Pay attention to original specifications!


The installation is done in reverse sequence of replacement.

Take care about correct fitting of the filter!

Please think about the environment when you throwing away the old filter!

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.

Similar to original!

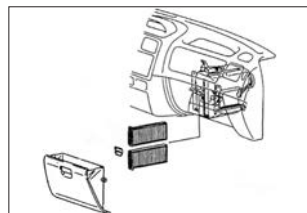

pict.1

