



# COPPER FREE COMMERCIAL VEHICLES BRAKE PADS

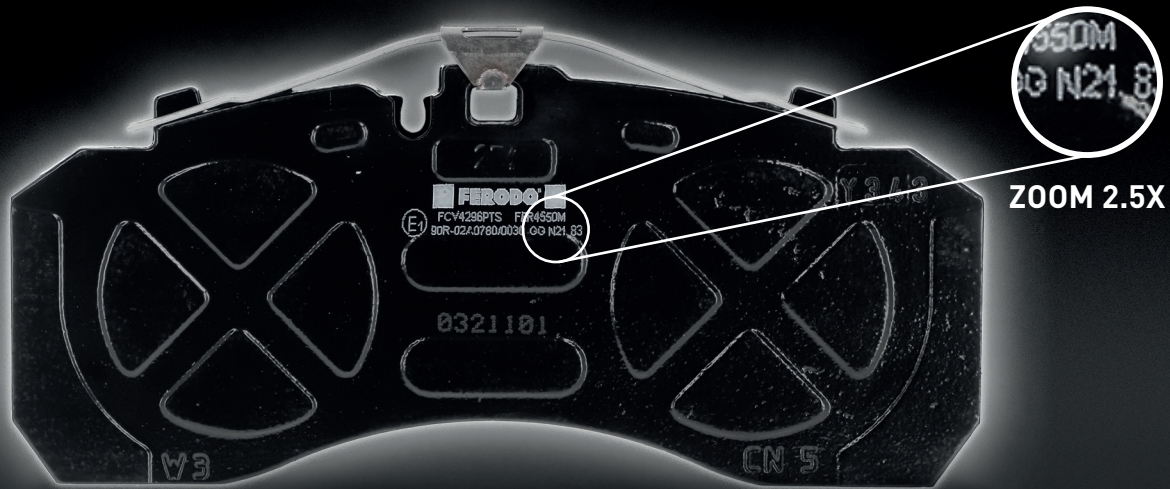

Designates compliance with requirements concerning cadmium, chromium, lead, mercury and asbestos.

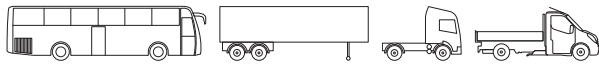

Designates compliance with each of the level "A" metals as well as copper, which must be reduced to less than 5 percent of material content by weight.



Designates compliance with the "Zero-Copper" requirement (less than 0.5% of total material content by weight)

Ferodo is one of the first manufacturers to introduce copper free brake pads for commercial vehicles. Our copper free brake pads are marked with the N-Leafmark, to indicate less than 0,5% copper. With the introduction of the N-Leafmark for our commercial vehicles, we aim for the best technologies and follow the strictest regulations. Doing so, Ferodo complies with the US law that requires level B, less than 5% of copper starting January 2021 and the law to have level N, less than 0,5% copper starting January 2025.



## HOW TO RECOGNIZE COPPER FREE BRAKE PADS

- Check the label on the box for the N-Leafmark
- Look for the N21 marking on your brake pad
- See our product specification on TecDoc

**COPPER FREE SOLUTION**

[www.ferodo.com](http://www.ferodo.com)