

Technical Bulletin

CSK3478, C347, C348

Installation Advice

Volkswagen Group 1.6 - 2.0TDI


On the FAI Camshaft Kit CSK3478 and individual cams C347 and C348, there are no timing marks to aid in alignment. When installing these parts, the correct installation tool must be used to ensure correct timing alignment. The tool is available from most motor factors and full fitting instructions are available on Autodata or similar workshop manual providers.



C347



C348

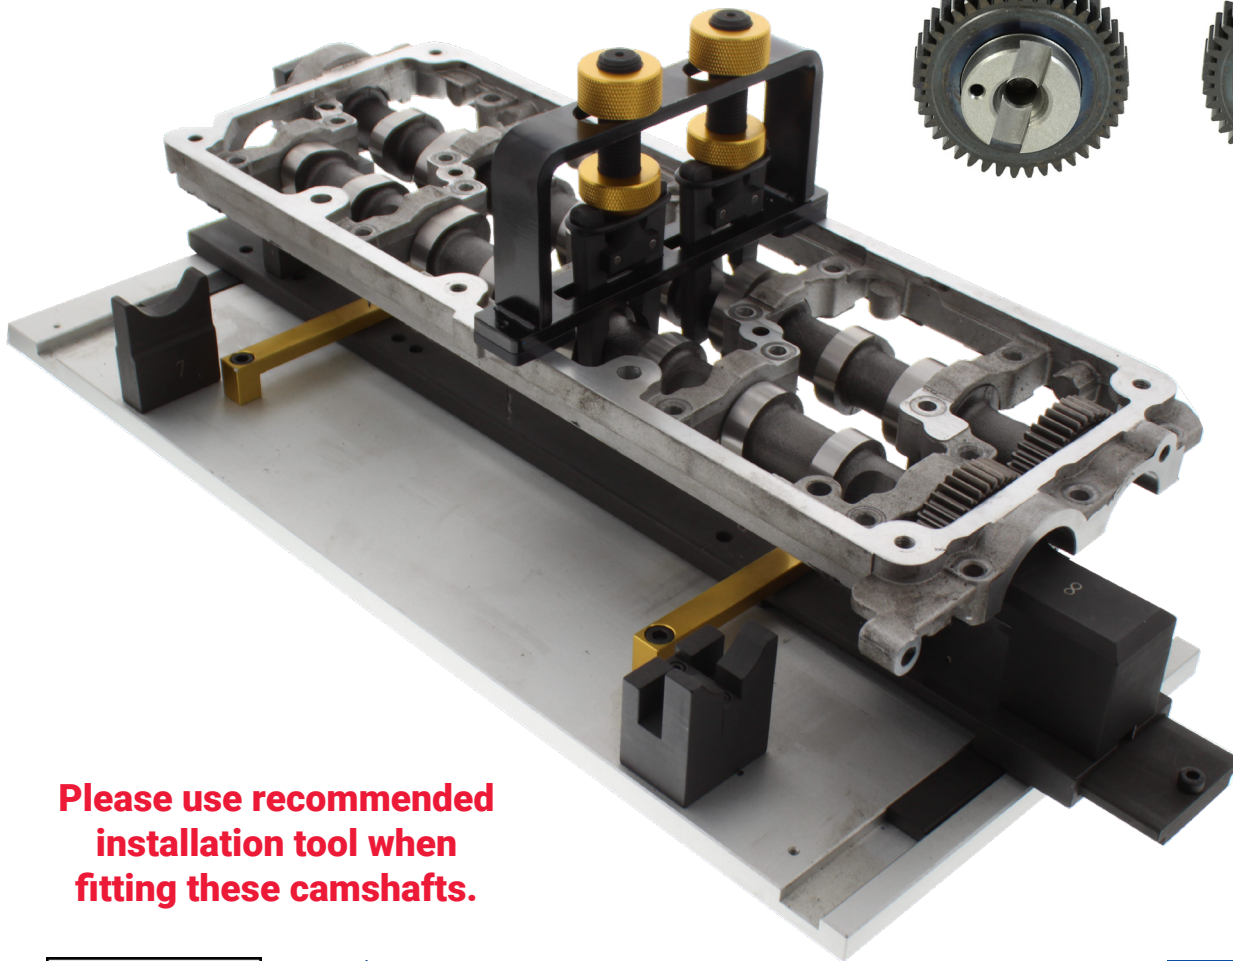

Please use recommended installation tool when fitting these camshafts.



TecAlliance
Certified Data Supplier



TB0043

+44 (0) 1525 351800



faiauto.com